

# izi Comfort Isofix™

FORWARD-FACING

USER MANUAL



ECE R44 04

GROUP  
1

WEIGHT  
9-18 kg

AGE  
9m-4y



# BeSafe®

## Thank you for choosing BeSafe iZi Comfort ISOfix.

BeSafe has developed this seat with much care, to protect your child during the next phase of her or his life.

! It is important that you read this user manual BEFORE installing your seat. Incorrect installation could endanger your child.

### Contents

Vital information	3
Preparing to install	4
Forward-facing ISOfix installation	5
Removing the seat	7
Forward-facing belt installation	8
Removing the seat	10
Positioning of the child	11
Sleeping position	12
Removing and refitting the cover	13
Cleaning instructions	15
Warning: potential misuse	15
Important advice	17
Guarantee	18
Point of sale information	19


## Vital information



- It is NOT ALLOWED to mount the seat in a front passenger seat WITH AN ACTIVATED AIRBAG.
- iZi Comfort ISOfix can be installed forward-facing with the ISOfix anchorage in a car equipped with ISOfix anchorage points.
- iZi Comfort ISOfix can be installed forward-facing with a 3-point car belt, approved to UN/ECE Regulation No. 16 or other equivalent standards.
- iZi Comfort ISOfix is approved in group 1, forward-facing from 9-18 kg.
- Read the car list to find out whether your car model is approved to use the seat.
- The harness straps must always be locked when the child is in the seat.
- The harness straps must be tightened without slack and not twisted.
- The seat cover contains magnets in the areas with the orange indications. Magnets can influence electronic equipment like pacemakers.
- The floor support must always be used. Make sure that the floor support is fully pushed down.
- When installed with ISOfix: Make sure the indicators are green before you drive.
- When the child weighs over 18 kg or the shoulder height grows above the highest position of the shoulder straps, the child must change to a group 2/3 seat.
- After an accident, the seat must be replaced. Although it may look undamaged, if you were to have another accident, the seat may not be able to protect your child as well as it should.
- Prevent the seat from becoming trapped or weighed down by luggage, seats and/or slamming doors.
- Before every use, make sure the harness is not damaged or twisted.
- Make sure you can fit no more than one finger between the harness and your baby (1cm).
- If in doubt, consult either the child restraint manufacturer or the retailer.

## Preparing to install

### Crucial parts

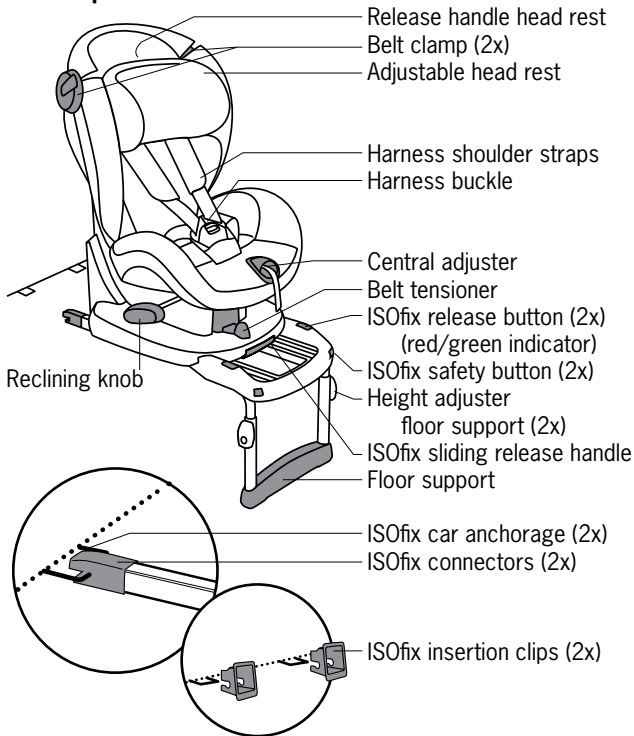


## Forward-facing ISOfix installation

It is NOT ALLOWED to mount the seat in a front passenger seat WITH AN ACTIVATED AIRBAG.




- 1- When mounting in the back seat, push the front seat forward as much as possible.  
When mounting in the front seat, adjust the back rest in an upright position.


- 2- Find the ISOfix anchorage points in the vehicle (1).

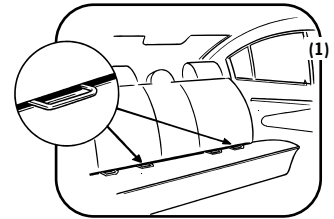


- 3- If your vehicle is not equipped with ISOfix insertion clips insert these to make installation easier. You can find the ISOfix insertion clips under the base of the seat or delivered separately with the seat (2).

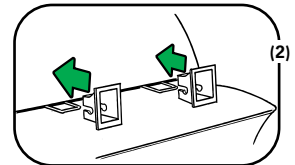


- 4- Pull the sliding release handle fully upwards and pull the seat forward (3).

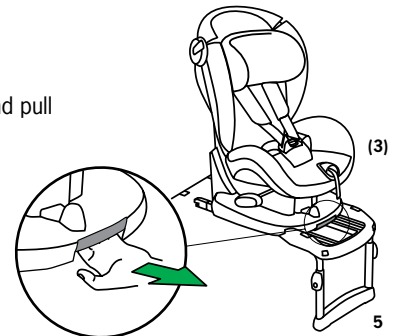


- 5- Click the ISOfix connectors in the ISOfix car anchorages. Make sure both indicators are GREEN (4).

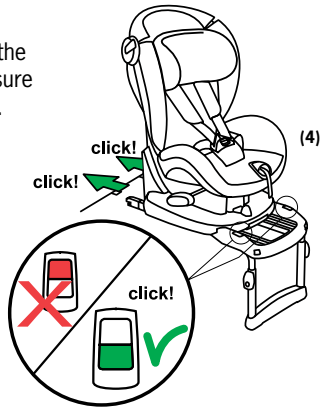

- 6- Push the floor support fully down. Make sure the floor support is in contact with the floor (5).

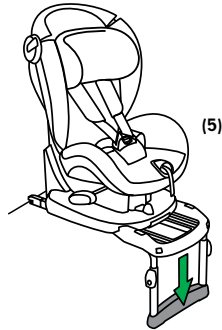


- 7- Push the seat firmly into the vehicle seat. The seat is now ready to use (6).

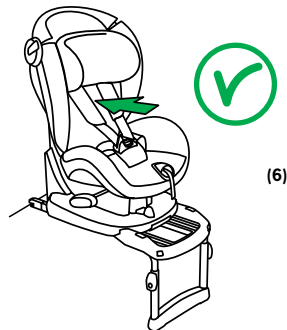


## Removing the seat

- 1- If the seat is installed in the back seat of the vehicle, push the front seat of the vehicle forward as much as possible


- 2- To release the ISOfix connectors simultaneously push the ISOfix safety button and pull the ISOfix release button. Do this for both sides. The ISOfix connectors are released when the indicators show RED (7).

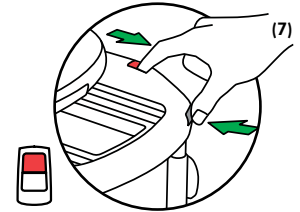

- 3- Pull the floor support upwards, by releasing the height adjusters at both sides (8).

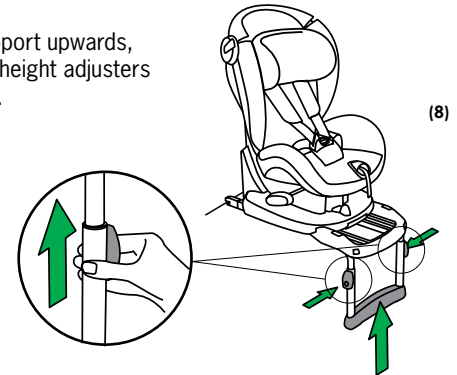

- 4- Remove the insertion clips from the car (9).

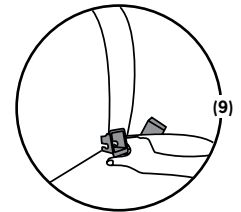


## Forward-facing belt installation


**!** It is NOT ALLOWED to mount the seat in a front passenger seat WITH AN ACTIVATED AIRBAG.




- 1- When mounting in the back seat of the vehicle, push the front seat of the vehicle forward as much as possible. When mounting in the front seat of the vehicle, adjust the back rest in an upright position.
- 2- Put the child seat on the seat of the vehicle. Unlock the belt clamps (10).
- 3- Release the release handle at the back of the head rest and push the head rest down while keeping the head rest upright (11).

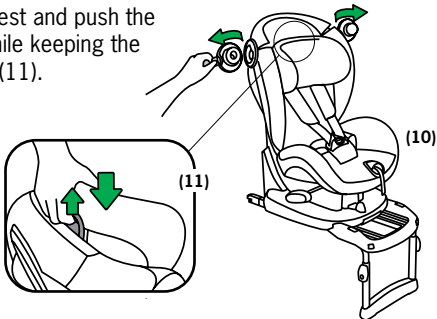


- 4- Pull the hip belt around the bottom base of the seat and click the car belt in the buckle (12).

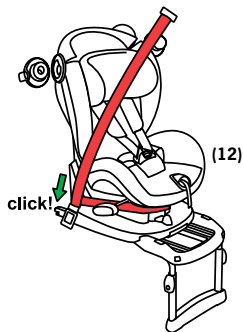


- 5- Put the shoulder belt through the belt clamps. Make sure the belt is not twisted (13).
- 6- Push the seat firmly into the car seat.
- 7- Tight installation is most important for forward facing seats. Tension the belts as follows: Pull the shoulder belt upwards (A). Have a firm grip on the shoulder belt in the seat area (B). Close the clamp on the inner side (C). Pull upper belt part on the door side and close clamp D (13).

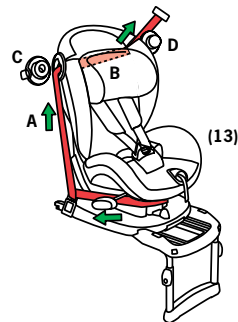

- 8- Push the belt tensioner in the arrow direction to tension the 3-point car belt (14).

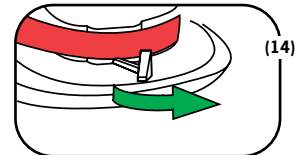

- 9- Make sure the 3-point car belt is as tight as possible. Repeat the procedure if the car belt is not tight.
- 10- Push the head rest in the correct position (refer to 'Positioning of the child' on page 11). Push the floor support fully down. Make sure the floor support is in contact with the floor of the car. The seat is now ready to use (15).



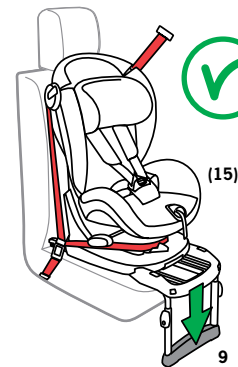


## Removing the seat


- 1- Loosen the tension in the car belt by releasing the belt tensioner.
- 2- If the seat is installed in the back seat of the vehicle, push the front seat of the vehicle forward as much as possible.
- 3- Unlock the belt clamps and unlock the car belt.
- 4- Remove the car belt and remove the seat from the vehicle.

## Positioning of the child

- 1- Position of the shoulder straps: Check that the shoulder strap slots are level with your child's shoulders (16).
- 2- The height of the shoulder straps and the head rest can be adjusted by releasing the release handle at the back of the head rest and pulling the head rest up or down while keeping the head rest upright (17).

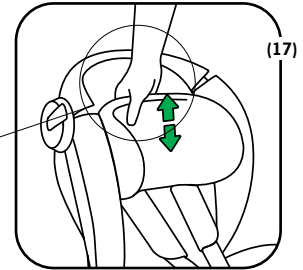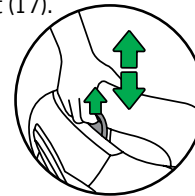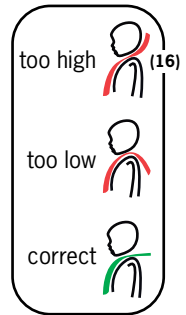


- 3- Pull the shoulder straps up while pressing the button of the central adjuster (18).

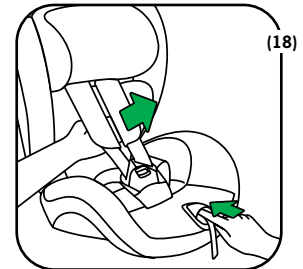


- 4- Open the harness buckle.


- 5- Position the shoulder straps over the orange marking at sides of the seat to keep the harness open while you position the child (19).

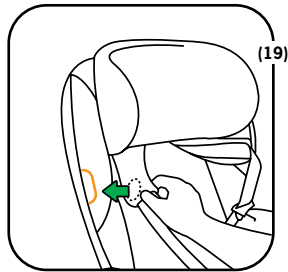

- 6- When the child is positioned, place the shoulder straps over the child's shoulders and close the buckle: CLICK! (20).

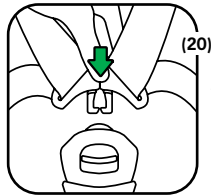


- 7- Pull the harness strap through the central adjuster in the direction of the green arrow straight up-/forwards. Continue pulling until the harness is a comfortable but firm fit (21).

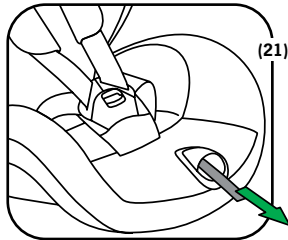

**!** Make sure that the harness straps are always locked and tightened when the child is in the seat.



### Sleeping position

- The seat has 4 reclining positions.
- By turning the reclining knob, the seat can be put in another position (22).

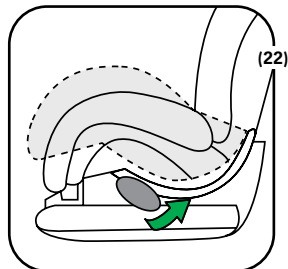


### Removing and refitting the cover

- There are 2 versions of the fabric cover. If there are velcro squares (see green arrow (23/24)), follow the steps of alternative 1. If there are no velcro squares go to alternative 2.

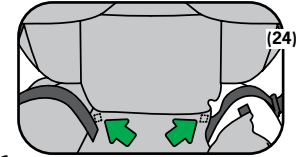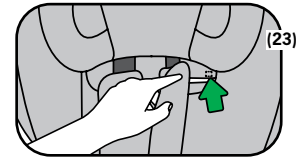

#### Removing the cover: alternative 1

- 1- Pay attention when you remove the cover, as fitting the cover is done in the opposite way.
- 2- Start to take off the lower seat part (25).
- 3- The cover of the head rest can be taken off separately by disconnecting the hooks at the backside and pulling off the fabric to the front.

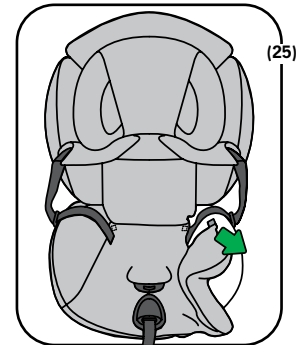


#### Refit the cover

- 1- Pull the head rest in the highest position. Mount the head rest cover and connect the hooks at the back side. Pull the harness straps through the holes. Connect the loose bottom part of the head rest fabric with the plastic part under the head rest.
- 2- Pull the harness straps through the opening of the seat cover and lock the harness buckle. Pull the crotch strap through the opening of the seat part.
- 3- Mount the top part and then the shoulder parts. Mount the seat part and bring the seat cover under the rear parts of the sidewalls.

## Removing the cover: alternative 2

- 1- Pay attention when you remove the cover, as fitting the cover is done in the opposite way.
- 2- To remove the seat cover, the harness straps must be released at both sides. See red circle. Start to take off the lower seat part and unhook both harness straps from the metal belt hooks (26).

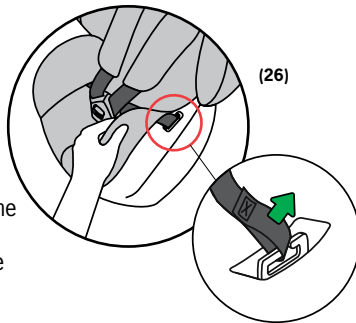

- 3- The cover of the head rest can be taken off separately by disconnecting the hooks at the backside and pulling off the fabric to the front.


## Refit the cover

 - 1- Pull the head rest in the highest position. Mount the head rest cover and connect the hooks at the back side. Pull the harness straps through the holes. Connect the loose bottom part of the head rest fabric with the plastic part under the head rest.
- 2- Pull the harness straps through the opening of the seat cover and lock the harness buckle. Pull the crotch strap through the opening of the seat part.
- 3- Pull the loops of the harness straps from the bottom of the seat part through the openings to the hooks in the bottom of the seat. Hook both harness straps on the metal belt hooks and pull the straps firmly to ensure that they are correctly installed.

- ! • Make sure that the harness straps are fixed in the right way, after fitting the cover.

## Cleaning instructions


- The cover of the seat must be washed according to the instructions on the inside of the cover (27).



- DO NOT use any aggressive cleaning products; these may harm the construction material of the seat.

## Warning: potential misuse

- It is NOT ALLOWED to mount the seat in a front passenger seat WITH AN ACTIVATED AIRBAG.
- Install only with 3-point car belts, approved to UN/ECE Regulation No. 16 or other equivalent standards (28).

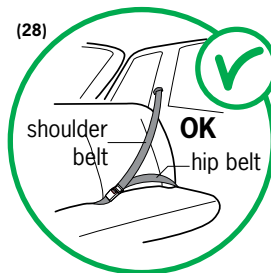



! DO NOT leave any space between the back of the seat and the seat of the vehicle (29).




! DO NOT use the seat with folded floor support (30).



! DO NOT use the seat without floor support when mounted forward facing.

! DO NOT drive with RED ISOfix indicators (31).

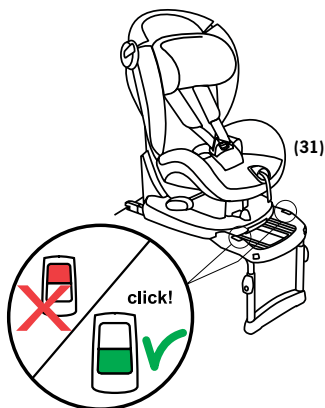

## Important advice

- DO NOT attempt to dismantle, modify or add any part to the seat. Warranty will expire if non-original parts or accessories are used.
- DO NOT use anything, such as a cushion, to raise the child seat off the passenger seat of the vehicle. In an accident the seat will not be able to protect your child in the right way.
- Never leave your child unattended in the seat.
- Make sure all passengers are informed about how to release your child in case of emergency.
- An unoccupied child seat should always be fastened in the vehicle.
- Make sure luggage or other objects are properly secured. Unsecured luggage may cause severe injuries to children and adults in case of accidents.
- Never use the seat without the cover. The cover is a safety feature and may only be replaced by an original BeSafe cover.
- Under the fabric cover we use EPS foam. Do not push or pull too hard against the foam, since you might damage the foam.
- Do not use any aggressive cleaning products; these may harm the construction material of the seat.
- BeSafe advises that child seats should not be bought or sold second-hand.
- KEEP this user manual for later use with the seat.
- DO NOT use the seat for longer than 5 years. Due to ageing, the quality of the material may change.
- DO NOT use at home. It has not been designed for home use and can only be used in a vehicle.
- When installed with ISOfix: Check the manufacturer's vehicle handbook.

## Practical advice

When the child seat is mounted in the car check all the areas where the child seat might touch the interior. We recommend using a (BeSafe) protection cover in these places to avoid cuts, marks or discolouration on the interior of the vehicle, especially in vehicles with leather or wooden interior.

## Guarantee

- All BeSafe products are carefully designed, manufactured and tested. All of our BeSafe child seats are tested periodically out of our continuous production in our test laboratory. Furthermore they are tested by independent test institutes.
- Should this product prove faulty within 24 months of purchase due to materials or manufacturing fault, except covers and harness straps, please return it to the original place of purchase.
- The guarantee is only valid when you use your seat appropriately and with care. Please contact your dealer, he will decide if the seat will be returned to the manufacturer for repair. Replacement or return cannot be claimed. The guarantee does not get extended through repair.
- The guarantee expires: when there is no receipt, when defects are caused by wrong and improper use, when defects are caused by abuse, misuse or negligence.

## Point of sale information

### Notice for FORWARD FACING installation

- This is a semi-universal ISOfix Child Restraint System. It is approved to regulation No. 44.04 series of amendments for general use in vehicles fitted with ISOfix anchorage systems.
- It will fit vehicles with positions approved as ISOfix positions (as detailed in the vehicle handbook), depending on category of the child seat and of the fixture.
- The mass group and the ISOfix size class for which this device is intended is: A.
- The seat is suitable for fixing into the seat positions of the vehicles listed in the separate 'car list'. Seat positions in other vehicles may also be suitable to accept this child restraint. If in doubt, consult either the child restraint manufacturer or the retailer. For updated car list see: [www.besafe.eu](http://www.besafe.eu).
- When installed with a 3-point car belt: Only suitable if the approved vehicles are fitted with 3-point car belts, approved to UN/ECE Regulation No. 16 or other equivalent standards.

### Next car seat

- The BeSafe iZi Up is a group 2/3 seat which can be used for children from 15 till 36 kg, which covers the age group from 4 till 12 years.

semi-universal  
9-18 kg



04443550

HTS BeSafe as  
N-3535 Krøderen, Norway - [www.besafe.eu](http://www.besafe.eu)

**BeSafe**<sup>®</sup>