


izi Go

REARWARD-FACING

USER MANUAL

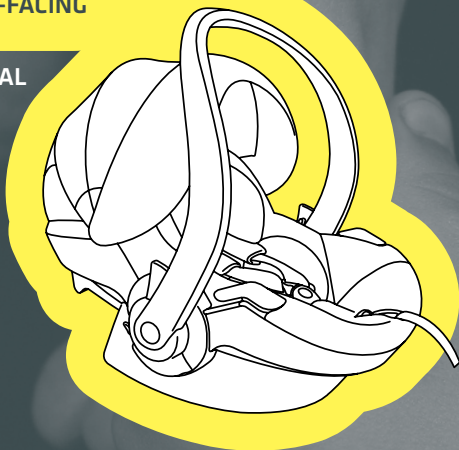

ECE R44 04

GROUP

0+

WEIGHT

0-13 kg

AGE

0-12 m



BeSafe[®]

Thank you for choosing BeSafe iZi Go

BeSafe has developed this seat with much care, to protect your child during the first phase of her or his life.

! It is important that you read this user manual BEFORE installing your seat. Incorrect installation could endanger your child.

Contents

Vital information	3
Preparing to install	4
Rearward-facing belt installation	5
Removing the seat	6
Positioning the child	7
Using the iZi Go with a stroller	10
Removing and refitting the cover	12
Cleaning instructions	12
Warning: potential misuse	13
Important advice	14
Guarantee	15
Point of Sale information	15

Warning

! Using the seat as a reclined cradle

- **IMPORTANT!** Keep for future reference.
- Never leave the child unattended.
- Do not use the seat as reclined cradle once your child can sit unaided.
- This seat is not intended for prolonged periods of sleeping.
- It is dangerous to use this seat on an elevated surface.
- Always use the restraint system.
- Do not use the seat if any components are broken or missing.



EN 12790-2009



Vital information

- It is **NOT ALLOWED** to mount the seat in a front passenger seat **WITH AN ACTIVATED AIRBAG**.
- iZi Go can only be installed rearward-facing with a 3-point car belt, approved according to UN/ECE Regulation No.16 or other equivalent standards.
- iZi Go is approved for group 0+, rearward-facing from 0-13 kg.
- The child must always be secured with the internal harness straps when seated in the child seat. The same applies to carrying the seat and when using in combination with a stroller.
- The seat cover contains magnets in the areas with the orange indications. Magnets can influence electronic equipment such as pacemakers.
- If the child weighs over 13 kg. or the top of the head of the child is above the seat or his shoulder height reaches above the highest position of the shoulder straps, you will need to change to a group 1 seat.
- The seat must always be replaced following an accident. Although it may look undamaged, in the event of another accident, it might not be able to protect your child as well as it should.
- Prevent the seat from becoming trapped or weighed down by luggage, seats and/or slamming doors.
- Before every use, make sure the harness is not damaged or twisted.
- Make sure you can fit no more than one finger between the harness and your baby (1cm).
- Make sure the car safety belt buckle runs in a straight line and stays below the belt hook of the seat. See the p.13 example.
- If in doubt, consult either the child restraint manufacturer or the retailer.



Preparing to install

Crucial parts

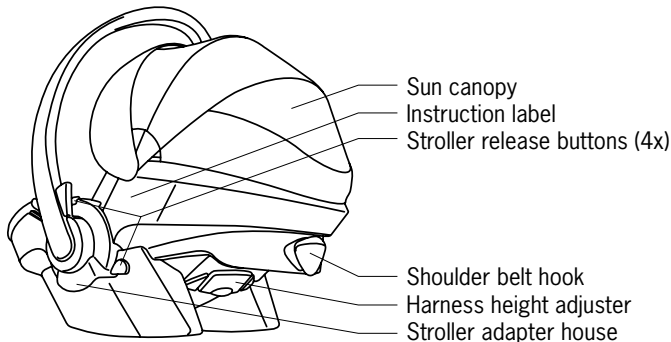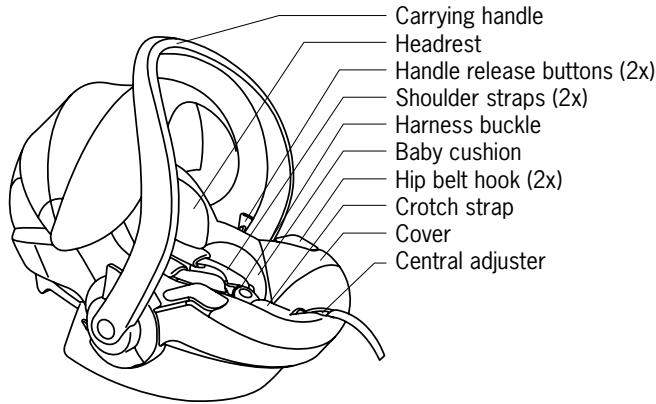


Rearward-facing belt installation


- It is NOT ALLOWED to mount the seat in a front passenger seat WITH AN ACTIVATED AIRBAG.




- 1- Position the seat on the vehicle seat. Make sure the carrying handle is in the carrying position (1).

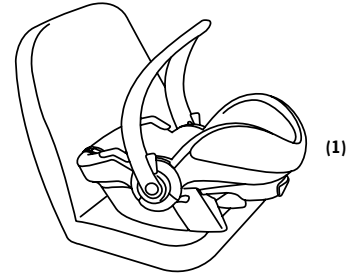


- 2- Guide the hip belt of the 3-point-belt over the blue parts through the hip belt hooks and fasten the seat belt with a 'click' (2).

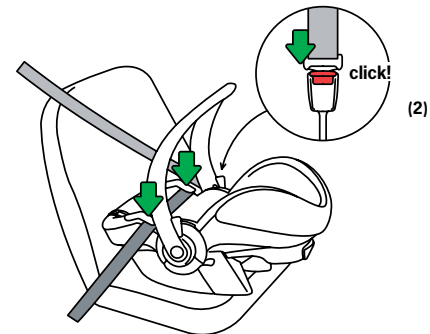

3- Guide the shoulder belt over the blue part through the shoulder belt hook at the rear side of the seat shell (3).

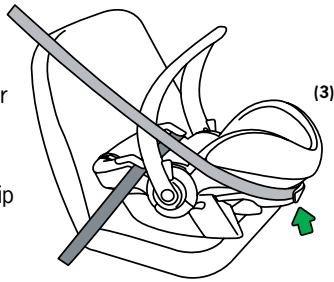

4- Tighten the 3-point belt by pulling the belt through the hip belt hooks and through the shoulder belt hook until it is really tight (4).

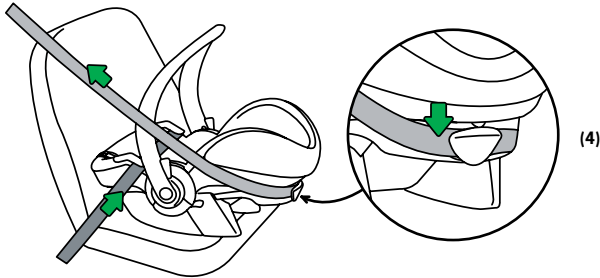

5- Leave the carrying handle in carrying position.

6- Positioned in the back seat of the vehicle, you should push the front seat of the vehicle backwards, so that it is in contact with the child seat. Positioned in the front seat, you should push the front seat forwards, so that the child seat is in contact with the dashboard. If this is not possible, leave a space of minimum 25 cm between child seat and back rest of the front seat or dashboard.


Removing the seat

1- Remove the shoulder belt from the shoulder belt hook at the rear side.

2- Release the belt from the buckle in the car and remove the belt from the hip belt hooks.

Positioning the child


• To position your child, you can fold the carrying handle behind the seat in 2 positions, by pressing both handle release buttons (5).

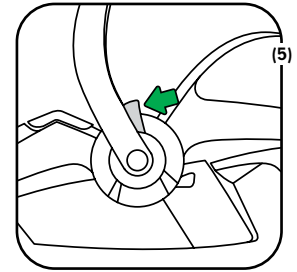


• Position the shoulder straps: Check that the shoulder strap slots are levelled with your child's shoulders (6).



• The height of the shoulder straps can be adjusted by pulling the harness height adjuster out and moving the adjuster up or down (7).

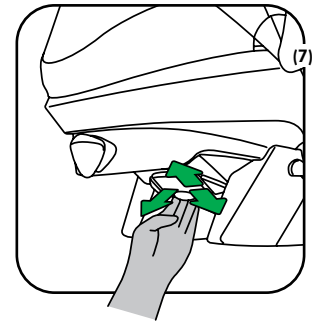


- 1- Pull the shoulder straps up while pressing the button of the central adjuster (8).


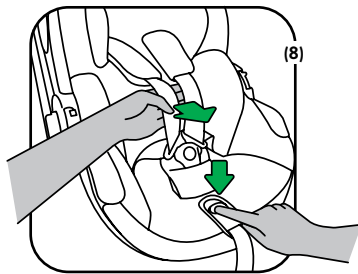


- 2- Open the harness buckle.


- 3- Position the shoulder straps over the orange marking at sides of the seat to keep the harness open while you position the child (9).

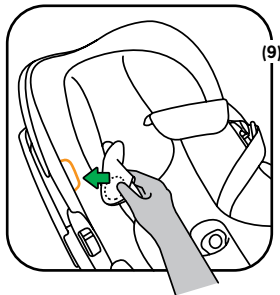

- 4- When the child is positioned, place the shoulder straps over the child's shoulders and close the buckle: click! (10/11).

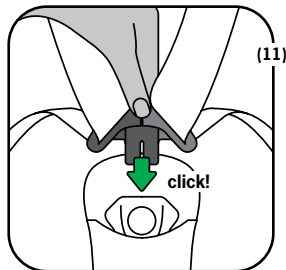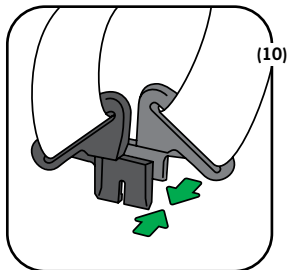

- 5- Pull the harness strap through the central adjuster in the direction of the green arrow straight up-/forward. Continue pulling until the harness is a comfortable but firm fit (12).

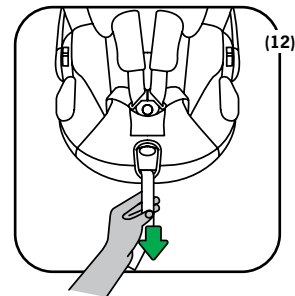


- Make sure that the harness straps are always locked and tightened when the child is in the seat. !


- You can protect your child against the sun by unfolding the sun canopy.

- Baby cushion (13/14/15):


0-4 months

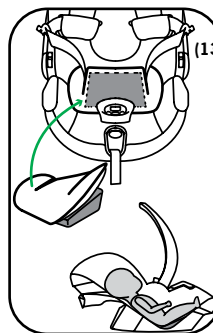

4-6 months

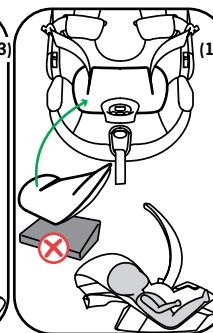

6 months and older


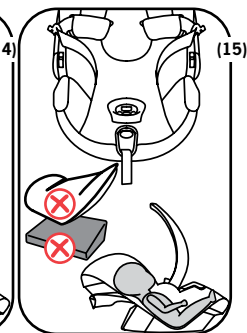


Using the iZi Go with a stroller

- The iZi Go can be installed on a range of strollers. For a complete list check www.besafe.eu


Installation on a stroller

- 1- Align the stroller adapter house above the adapters of the stroller and move straight down, click 2x (16/17).

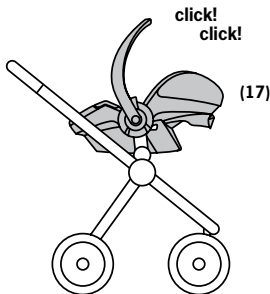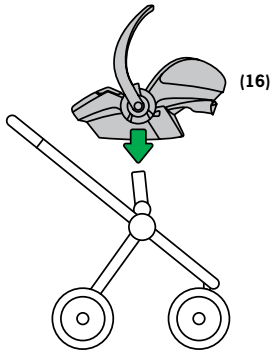


Removing from a stroller

- 1- Move the carrying handle into carrying position.
- 2- Push the stroller release up at both sides while lifting the seat vertically from the stroller (18).

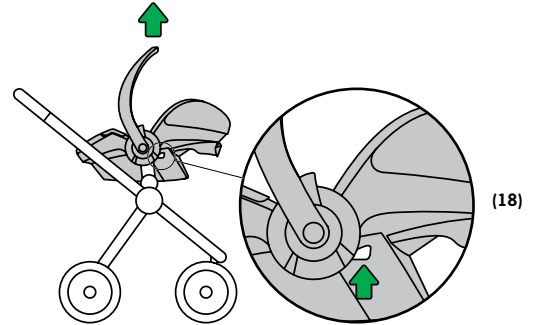

- You can also release the seat from the stroller by pushing the release handles besides the carrying handle to the front of the seat (19).

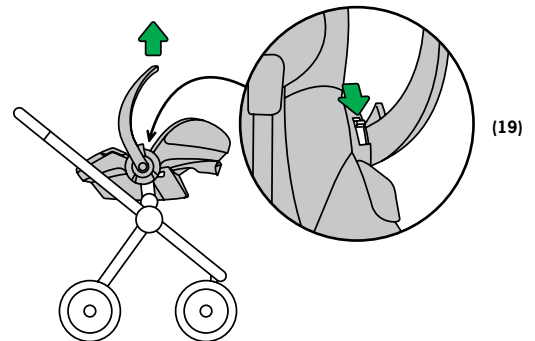

Removing and refitting the cover

Removing the cover


- Pay attention when you remove the cover, as fitting the cover is done in the opposite way.
- Take off the headrest and the baby cushion.
- Open the zippers. Do not remove the harness straps from the hooks in the seat.
- Take off the complete cover by pulling it carefully from the foam.

Refit the cover

- Pull the harness straps through the openings in the cover and close the zippers.
- Pull the buckle through the crotch strap cover and pull the hole for the central adjuster over the central adjuster.
- Fix the cover at all sides by putting it carefully between the foam and seat shell.


Cleaning instructions


- The cover of the seat must be washed according to the instructions on the inside of the cover (20).



- DO NOT use any aggressive cleaning agents; these may harm the construction material of the seat.


Warning: potential misuse

- It is NOT ALLOWED to mount the seat in a front passenger seat WITH AN ACTIVATED AIRBAG. 
- DO NOT use the seat positioned in the vehicle, with the carrying handle in a downward position. The handle must be in the vertical carrying position while driving.
- Install only with 3-point car belts, approved according to UN/ECE Regulation No.16 or other equivalent standards (21).

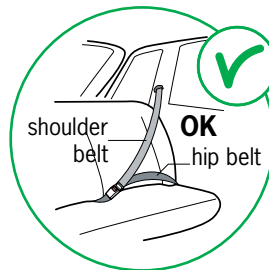

Correct installation

- Hip belt through the hip belt hooks over the seat (22).
- Shoulder belt through the shoulder belt hook at the rear side of the seat.
- Seat belt fastened.

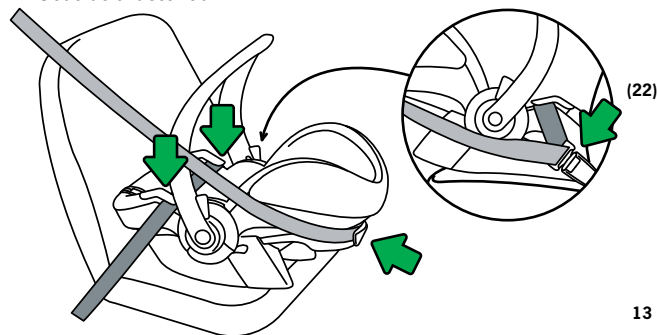

Important advice

- ! • DO NOT attempt to dismantle, modify or add any part to the seat. The warranty will not be honoured if non-original parts or accessories are used.
- DO NOT use anything, such as a cushion, to raise the child seat off the passenger seat of the vehicle. In the event of an accident the seat will not be able to protect your child properly.
- Never leave your child unattended in the seat.
- Make sure all passengers are informed about how to release your child in case of emergency.
- An unoccupied child seat should always be fastened in the vehicle.
- Make sure luggage or other objects are properly secured. Unsecured luggage may cause severe injuries to children and adults in the event of an accident.
- Never use the seat without the cover. The cover is a safety feature and may only be replaced by an original BeSafe cover.
- We use EPS foam under the cover. Do not push or pull too hard against the foam, since you might damage the foam.
- Do not use any aggressive cleaning agents; these may harm the construction material of the seat.
- BeSafe advises that child seats should not be bought or sold second-hand.
- KEEP this user manual with the seat for later use.
- DO NOT use the seat for longer than 5 years. The quality of the material may change with ageing.
- DO NOT use at home on a table or worktop, if your child is seated in the seat.

Practical advice

When the child seat is mounted in the car check all the areas where the child seat might touch the interior. We recommend using a (BeSafe) protection cover in these places to avoid cuts, marks or discolouration on the interior of the vehicle, especially in vehicles with leather or wooden interior.

Guarantee

- All BeSafe products are carefully designed, manufactured and tested. All our BeSafe child seats are tested periodically during flow production in our test laboratory. Furthermore they are tested by independent test institutes.
- Should this product prove faulty within 24 months of purchase due to materials or manufacturing fault, except covers and harness straps, please return it to the original place of purchase.
- The guarantee is valid only if you use your seat properly and with care. Please contact your dealer and he will decide whether the seat will be returned to the manufacturer for repair. Replacement or return cannot be claimed. Repair of the product does not extend the guarantee.
- The guarantee is cancelled in the following situations: if there is no receipt, if flaws are caused by incorrect and improper use, if the flaws are caused by abuse, misuse or negligence.

Point of Sale information

Notice for REARWARD-FACING installation

- This is a universal Child Restraint System. It is approved according to regulation No. 44.04, series of amendments for general use in vehicles fitted with 3-point car belts, approved to UN/ECE Regulation No. 16 or other equivalent standards.

Your next car seat

- BeSafe offers several car seats suitable from 9 kg and up. For the updated car seat range see www.besafe.eu

B804-0804-B
N2001600

universal
0-13 kg



04444006

HTS BeSafe as
N-3535 Krøderen, Norway - www.besafe.eu

BeSafe[®]